



# **User manual**

Afford Reassurance Products, Keep Excellent Service =

# waterproof smart tv



# **WATERPROOF MIRROR TV** series

Black Mirror

Silver Mirror

AND HIGHER QUALITY OF LIFE, THIS IS THE MEANING OF THE BIRTH OF WATERPROOF TVS. WE WILL BRING HOPE TO THOSE WHO HAVE A BRIGHT FUTURE FOR LIFE AND ENJOY THE LUXURY


AND QUALITY OF SENIOR SERVICE LIFE.


IN ORDER TO PURSUE A BETTER

new standard of **LUXURY LIFE** 






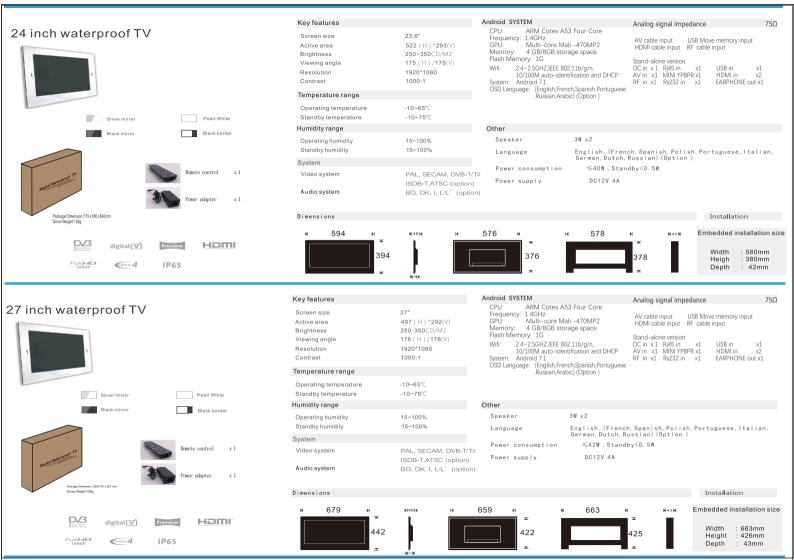

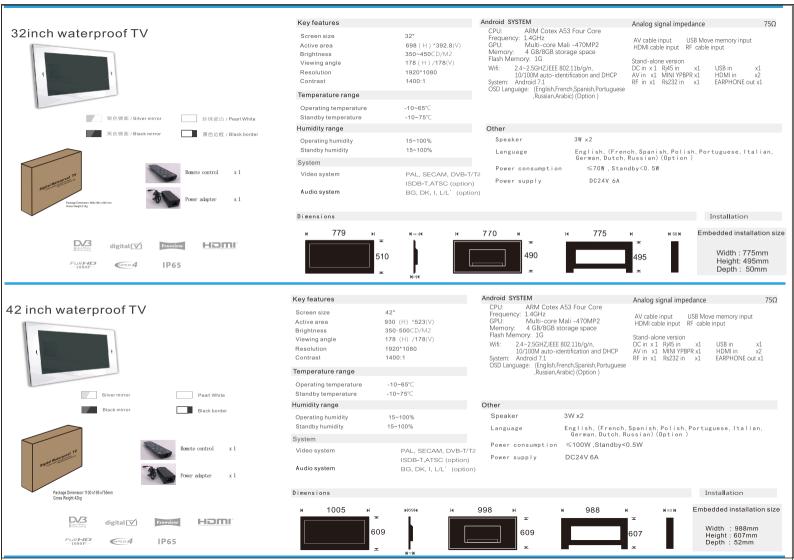

# **WATERPROOF TV INSTALLATION METHOD**

- 1. In the wall planning and installation location reserved for installing TV grooves;
- The required TV cable lock pre-installed in the groove;
   The television embedded stent installed in the groove, and the use of screws;
- 4. Connect all the TV cable and power and debug the TV; 5. Put the TV into the TV embedded bracket.
  - VESA

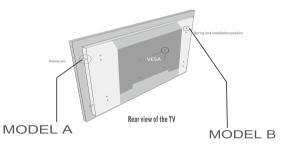

This installation mode is to use a spring lock to fix the TV


First plan the installation location according to the product parameters reserved groove


Second, the need to use the power cord and data cable reserved groove, easy to connect the TV

The third TV embedded stent placed in the groove, and use screws to fix the bracket  $\,$ 

conduct the TV test, and then hang the TV in the bracket

Finally, connect the data cable and the power cable to the TV interface.

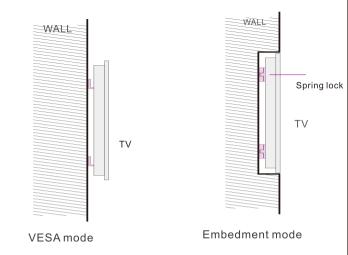

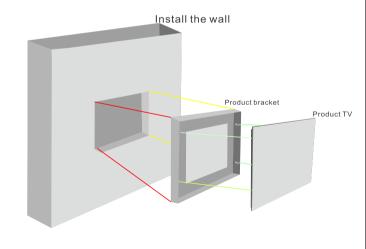

### **Remote Control Unit**



#### (1) POWER button

Press this button to switch on the TV when at standby mode or enter standby mode

#### (2) INFO button

Display the information on the top-right corner of screen (e.g. channel number, TV system, resolution and frequency for PC etc).

#### (3) **ZOOM** button

To change picture aspect ratio

#### (4) MUTE button

Press this button to mute or restore sound

#### (5) 0-9 buttons

In TV mode, used to select channels.

In Teletext mode, used to select page numbers.
Used to key in password (child lock or VChip)

#### (6) ▲ CH ▼ button

Increase and decrease TV channel.

Up or Down in navigating OSD

Increase and decrease index number in Teletext mode.

Used to switch from SCART mode to TV mode

#### (7) ▲VOL▼ button

Adjust the volume. ▲and ▼are used for increment and decrement in adjustment by end user.

#### (8) SOURCE button

Press to choose source in need, such as DTV, ATV or other channel.

#### (9) **▼** ▶ **★** ▼ button

Left, right, up and down in the menu

#### (10) TIMESHIFT button

In DTV mode, press this for shifting time.

### Remote Control Unit



#### (11) SLEEP button:

Set time to turn to time off the TV

### (12) button

Return to previous TV channel.

#### (13) MENU button

Call out OSD.

Go to the previous level of OSD.

# Exit OSD completely if at highest level of OSD (14) SET button:

Display the information on the top-right corner of screen (e.g. channel number, TV system, resolution and frequency for PC etc).

#### (15) EXIT button

Exit from the OSD menu

#### (16) AV button

Press this for pre-recorded list in AV mode

#### (17)HDMI button

Press this for pre-recorded list in HDMI mode

#### (18) USB button

Press this for pre-recorded list in USB mode

#### (19) TV button

Press this for pre-recorded list in TV mode

#### (20)OK button

this key is ok

#### (21)AÚTO Search

this key is screen will transition to the TV state, the OSD interface for the search interface


# (22)




this keys is USBUnder the condition of USB is used for the function button to play pictures or videos

# **Input Source**

This TV set allows you to adjust any settings by selecting from the menu screens.

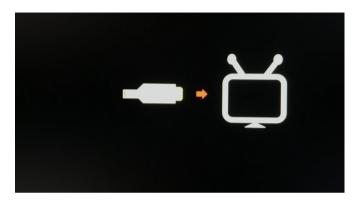

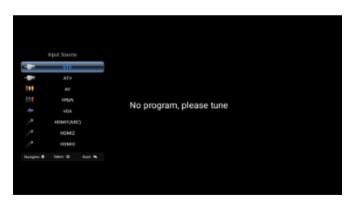

Please you select "source".then you can select DTV/ATV/AV/ YPBPR/HDMI/VGA/Media Browser by pressing, you can adjust The item  $_{\blacktriangle\blacktriangledown}$  select by pressing  $_{\blacktriangle}$  +/-

### Menu Screens

In the TV, use remote control menu - press MENU key -Restore factory Default, It is the TV factory settings options, according to your needs regional language selection



# Input USB Menu

In the remote control menu - press USB key or source key netry, It is the USB channel options, according to your needs selection



#### Channel Menu

Manual search for digital TV station, select the manual search table option to press the OK key to enter the next interface. After the channel number, frequency is set, press the OK key to carry on the search table.

To simulate the manual search, choose a good storage to Taiwan, you need, you can also choose color and sound format, press the arrow keys to select "search" option, press left key can search, but also by fine tuning the frequency changes, select the best frequency.



### Picture Menu

Enter the Picture menu, you can choose Picture Mode Standard, Color Temperature,

Aspect Ratio, Noise Reduction and Screen by pressing CH+/- Buttons. You can adjust the item selected by pressing ▲+/-.



### Sound Menu

Enter Sound menu, you can choose Sound Mode Standard, Balance, Auto Volume, Surround Sound.

AD Switch Off, SPDIF MODE and EQ by pressing CH+/- Buttons You can adjust the item selected by pressing  $\checkmark$ +/-.



# **Setting Menu**

Enter the setting menu ,you can choose menu time set, subtitle set ,HDMI set,system sandby set and restore to default se t etc.



### Time Menu

Enter Time menu, you can choose Clock, Off Time, On Time, SleepTimer, Auto Standby Off.

Time Zone London GMT and Daylight Saving Off by pressing CH+/- Buttons You can adjust the item selected by pressing ▲+/-.




### Lock Menu

Choose the option of Lock System with the up and down keys. Then open the lock function w and right keys. Please remember that initial password is 0000. If you want to adjust password, you should select option of set password and then input old password, new password. When new passwor input again is correct and make sure above operant this mean that you successfully reset password. Wyou want to shield some programs you donlike ,please select the option of block program and input channel number.



# Android system operation

Please use the remote control button "signal source" or "menu, and then choose to confirm exit TV interface state.

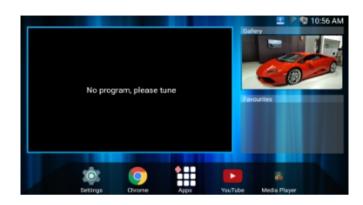


Home page can be divided into two parts, one part is the traditional TV portal, Gallery application and some of your favorite applications, in the upper right corner will display network and SD card state. The other part is Navigation bar; click on the corresponding icon can jump to Store, Browser, Apps, Settings or Media. Picture 18th is click on Apps icon after the jump screen



## Wifi Menu


Pick the image of settin g and Press OK button to appear the interface of the android setting

Select the "wireless connection and press OK key to open it, and then by the e appearance of a Wi Fi signal available, you can see a list of the most new Wi Fi signals. If you want to use the WiFi signal, please enter the correct password for Wi Fi." + "can be used to add a Wi Fi

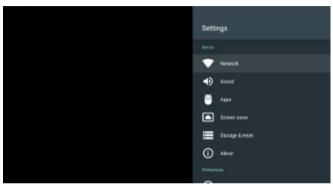


# **Ethennet Menu**

After the insertion of the cable system will display the IP address, you can access the Internet. Portable hotspots and VPN function in more, portable hotspot feature is the ability to sense. WiFi wireless LAN signal hot, provide to the location of the other equipment of wireless local area network (WLAN) Internet access service.

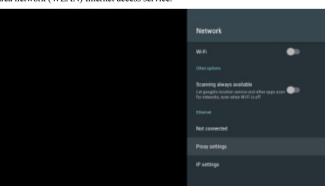


### Sound Menu

In sound, you can set the volume, notify the prompt tone, button prompt tone, as well as some audio settings, etc..

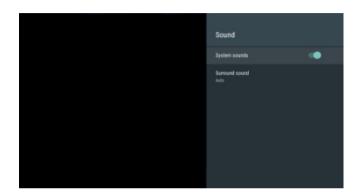


# **About Menu**

You can view and set the relevant information for the OTA update, you can also view the model, Android version, version number information.

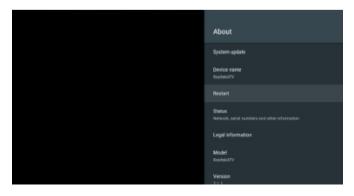


# Storage Menu

Here you can view the details of the internal storage space and the use of SD card.

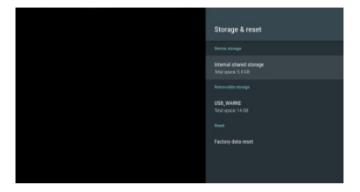


## **APPS Menu**

In the application, you can view the application of the installation, running applications and all of the applica tion.

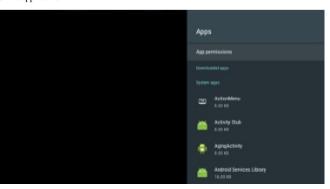

# **Keyboard Menu**

Users can be based on personal preferences of the keyboard input settings, you can also view the personal dictionary.

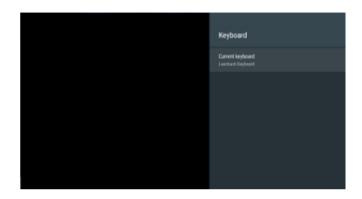

# Security & restrictions

